

## Technical Specifications

© Copyright 2012 SmartAVI, All Rights Reserved

**Smart-AVI**  
Smart Audio Video Integration

### SPECIFICATIONS FVX-2000

**Monitors** VGA, SVGA, XGA and VESA

#### Video Signal

Analog Signal: Red, Green, Blue,  
0.7Vp-p/75 ohms positive  
Resolution - 1600x1200  
Bandwidth - 200 MHz  
Sync TTL Compatible

#### Keyboard/mouse

CPUs - IBM PC, SUN, MAC-ADB  
Keyboard - PS/2, MAC-ADB, SUN  
Mouse - PS/2, Wheel Mouse  
Software - Independent

**Power Supply** 110/240 -5VDC-3A

#### Fiber

Fiber – SC-type  
0/125µ multimode fiber – 1,400 feet  
62.5/125µ multimode fiber – 700 feet

#### Size/Weight: (Inches)

4.38”(W) x 5.28” (L) x 1.63 (H), 5lbs

#### KVM switching

The FVX2000 with local KVM access allows an additional KVM station to be connected to the transmitter. The CPU or KVM switch can easily be operated from the remote or local KVM station not simultaneously. The transmitter is active during boot-up and the connected CPUs video is displayed on both the transmitter and remote KVM stations monitor.

To activate the receiver's KVM station, simply press any key on the KVM stations keyboard. To activate the transmitters KVM station, press any key on the KVM station's keyboard.

## NOTICE

The information contained in this document is subject to change without notice. Smart-AVI makes no warranty of any kind with regard to this material, including but not limited to, implied warranties of merchantability and fitness for any particular purpose.

Smart-AVI will not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material.

No part of this document may be photocopied, reproduced or translated into another language without prior written consent from Smart-AVI.

For more information, visit [www.smartavi.com](http://www.smartavi.com).

### Rack Mountable Option



Our SmartRack is the perfect solution to allow virtually all SmartAVI devices to be custom mounted in a standard 19" server rack. The SmartRack is fully adjustable and can secure/organize several devices.



**Extends and share any PC Equipped with XVGA and PS/2 KVM Signals up to 1,400 Feet with Multimode Fibers**

**Smart-AVI**  
SMART AUDIO VIDEO INNOVATION

SmartAVI, Inc. / Twitter: smartavi  
11651 Vanowen St. North Hollywood, CA 91605  
Tel: (818) 503-6200 Fax: (818) 503-6208  
<http://www.SmartAVI.com>

[www.smartavi.com](http://www.smartavi.com)

## Introduction

The FVX-2000 extends any KVM signal, XVGA and PS/2 up to 1400 feet with fiber cable.


## Features

- Top Signal Quality at Maximum Extension Over Multimode Fiber (1,400 ft.)
- Superior Image Quality at all Resolutions
- Video Resolutions up to 1600 x 1200 at 60Hz
- Customizable/Programmable DDC Table
- Dual Access/Local Keyboard and Mouse
- Supports PS/2 Keyboard/Mouse
- Supports XVGA
- Supports all PC/AT and PS/2 Keyboards with Full Emulation
- Caps Lock, Num Lock and Scroll Lock are Automatically Saved and Restored
- Fiber Plug Type LC
- Compatible With all Operating Systems
- Compatible With all Major KVM Switches
- Compact Metal Casing

## Applications

- **Sharing:** Enables easy access to one server from remote location.
- **Security:** Safeguards the servers by storing them in a secure and climate controlled environment.
- **Saving:** Saves equipment costs, physical space and utilities expense.
- **Productivity:** Increases productivity by facilitating testing and performance evaluation of software and equipment, on multiple servers.
- **Multimedia:** Can be used in multimedia presentations where the presentation information is broadcasted to various KVMs.

## Installation Diagram

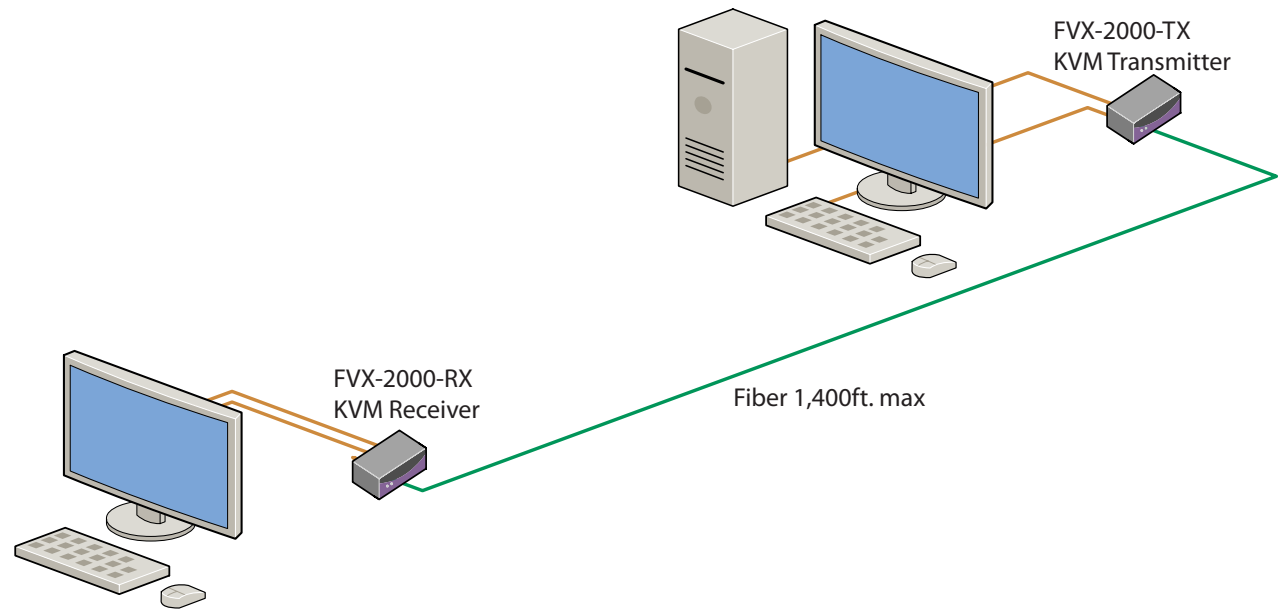

## Installation

1. Before installing any SmartAvi products, verify that the computer's XVGA, mouse and keyboard all work properly when connected directly.
2. Power off computer and monitor.
3. Using compatible cables, connect the XVGA, mouse, keyboard, from the PC to the FVX-TX2000.
4. Connect and run 2 SC fiber from the FVX-TX2000 to the FVX-RX2000's location.
5. Plug in the XVGA monitor, mouse, keyboard to the FVX-RX2000.
6. Connect the power supplies to the transmitter and receiver. The Power Light will be illuminated.
7. When the fiber connection is working correctly, the Link Light will remain steady.
8. Turn on the computer and monitor.

## Installing and preparing the Fiber

1. Fiber used, SC type
2. 62.5μ fiber optic cable, 800 ft.
3. 1400μ fiber optic cable, 1,400 ft SC Fiber

